

DISPLAY

This is the main visual feedback of the instrument. When in home screen, it shows the sound name, the bank number (1-8) the status and, if active, the name of effect 1 and 2, the status of the amp simulator and the amount of transpose.

VOLUME

Main volume of the instrument.

VOLUME



SOUND NAME

Modeled Tine EP
1 Pan Cho On +@

BANK

FX-1

FX-2

AMP

TRANSPOSE

EDIT BUTTON

While in the home screen, press this button to enter the EDIT mode.

Here, using the VALUE ENCODER, you can scroll through menu pages and change sound parameters or settings. Once reached the page of interest, press the button again (ENTER), the cursor appears, then use the Encoder to change the value. Once done, press the EXIT button to go back.

Some parameters may require a confirmation, use this button again to confirm (YES).

Press and hold this button at any time to quickly overwrite the current preset.

ENTER / YES

BACK / NO

EXIT

SET

EDIT

OVERWRITE

LOCAL OFF

VALUE

VALUE ENCODER

When in edit mode, turn the encoder to scroll the different pages (the knob is red). Once inside the desired page, turn the encoder to change the relative settings (the knob turns green). This encoder also works as a push button.

When the value of a parameter has been changed, a single push on the encoder will restore the old value.

Press and hold the encoder in order to turn on the «LOCAL OFF» mode (the knob turns blue).

EXIT BUTTON

While navigating through the menu pages and changing parameters or setting values, press this button to exit the value entry mode or to go back to the previous page, or to exit the menu and return to the home screen.

BANK AND PRESETS SELECTION

Press the BANK button, it starts blinking and all preset buttons lit steady.

Press one of the PRESET buttons in order to select a bank number from 1 to 8.

The BANK button will now be blinking slowly.

Now select a preset from 1 to 8. The selection is complete and you will see the new sound and bank number on the display.

If you need to select another sound from the same bank just push the relative preset button.



TRANSPOSE FUNCTION

While in the home screen, press and hold the EXIT button, turn the VALUE encoder to select the transpose amount.

This is shown on the main screen.

CRUMAR®

seventeen

BALANCED OUTPUTS

Audio left and right TRS
balanced outputs.

Connect your amplification
system here. PLEASE always
use a stereo system for better
performance!


MIDI OUT

Standard MIDI
cables plug.

HEADPHONES OUT CONNECTOR

AC MAIN PLUG INLET

From 100 to 240 VAC.
Suitable for every Country.

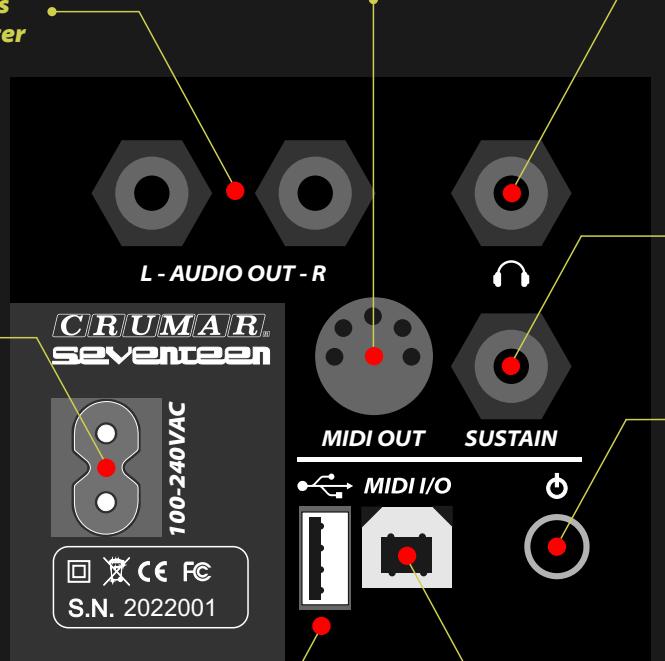

SYSTEM USB PORT

USB-host port - use it to connect
USB class compliant MIDI controllers,
USB flash drives.

Max current draw: 300mA.

MIDI IN/OUT USB

Device type B USB port used to connect
Crumar Seventeen to your computer
for both MIDI input and output.

SUSTAIN PEDAL INPUT

Used for sustaining notes.
Plug your sustain pedal before
powering on your instrument.
The pedal polarity is auto-detected.

POWER ON/OFF

BUTTON
The fun starts here.